

## WARNING

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his or her own expense.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS A LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS AS SET OUT IN THE RADIO INTERFERENCE REGULATIONS OF THE CANADIAN DEPARTMENT OF COMMUNICATIONS.

LE PRESENT APPAREIL NUMERIQUE N'EMET PAS DE BRUITS RADIOELECTRIQUES DEPASSANT LES LIMITES APPLICABLES AUX APPAREILS NUMERIQUES DE CLASSE A PRESCRITES DANS LE REGLEMENT SUR LE BROUILLAGE RADIOELECTRIQUE EDICTE PAR LE MINISTERE DES COMMUNICATIONS DU CANADA.

This manual is the confidential proprietary document solely for the use of Acroprint Time Recorder customers. Material in this manual is subject to change without notice and does not represent an obligation on the part of Acroprint Time Recorder. No part of this manual may be reproduced or transmitted in any form by any means without the express written permission of Acroprint Time Recorder.

This User's Manual has been carefully prepared to cover all aspects of the time recorder's use. Before using the time recorder, we recommend you carefully read this manual to familiarize yourself with the Time Recorder.

ALL RIGHTS RESERVED.  
© 2001 ACROPRINT TIME RECORDER



# CONTENTS

Introduction & features .....	1
Before using the time recorder .....	2
Quick easy setup .....	3
How to program the recorder .....	4
Setting the display format	
Setting the time .....	5
Setting the date .....	6
Setting the 12/24 hour display format .....	7
Setting the print order .....	8
Setting the print style	
Setting the year digit .....	9
Setting the hour/min .....	10
Disabling the leading zero .....	11
Setting the comment .....	12
Setting the language .....	13
Setting the print method .....	14
Setting the daylight saving time	
Setting the starting date of daylight saving time .....	16
Setting the ending date of daylight saving time .....	17
Deleting the daylight saving time setting .....	18
Setting the password	
Registering the password .....	19
Using the password to access program settings .....	20
Canceling the password .....	21
Resetting .....	23
Wall mounting .....	24
Replacing the ribbon cassette .....	25
Troubleshooting .....	27
Specifications .....	28

# INTRODUCTION & FEATURES

## INTRODUCTION:

Thank you for purchasing an Acroprint Model ES700 Time Recorder. We are confident this time recorder will give you full satisfaction. Items such as the time and date are preset at the factory. After plugging in the AC power, the recorder may be used immediately. However, we recommend reading this manual before you start using your time recorder.

## FEATURES:

Main applications: payroll/job cost recorder or time stamp.

- Quartz timing for accuracy
- Digital LCD display (Date, Hour, Minute, Day of the week indication)
- Dot-Matrix printer
- Perpetual calendar
- Automatic date, day, and month change
- 3-way print activation
  - Manual
  - Automatic
  - Semi-automatic
- Prints 4 languages: English, French, Spanish, Portuguese
- Prints seconds
- 12 or 24-hour format
- Regular minute, tenths, twentieths, or hundredths of an hour
- 2 or 4-digit year print
- 13 preprogrammed comments
- Adjustable print position

## Caution:

### Do not use in places:

- Subject to high humidity and dust.
- Exposed to strong or continuous vibrations.
- Exposed to direct sunlight.
- Affected by chemical or ozone.

Place the time clock close to the wall outlet so that it is easily accessible to disconnect.

The temperature range in which all functions of the time recorder will operate correctly is from -5°C to 45°C. Be sure to place your time recorder only in locations where the temperature range is not exceeded and has no sharp fluctuations in temperature.

 
Replace battery with TOSHIBA, part no. CR 2450 TVB only. Use of another battery may present a risk of fire or explosion.

# BEFORE USING YOUR TIME RECORDER

## Package Contents


Unpack the time recorder and check its contents to ensure that the time recorder unit and all accessories as shown below are included.

## ACCESSORIES INCLUDED

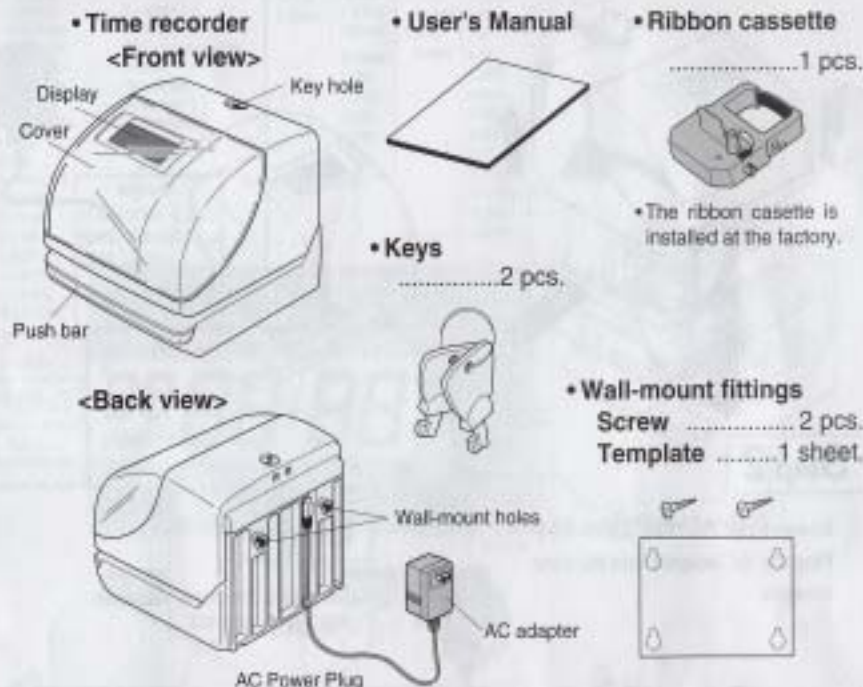

## LOCATION OF COMPONENTS

 It is important to become familiar with the time recorder before setting it up and using it.

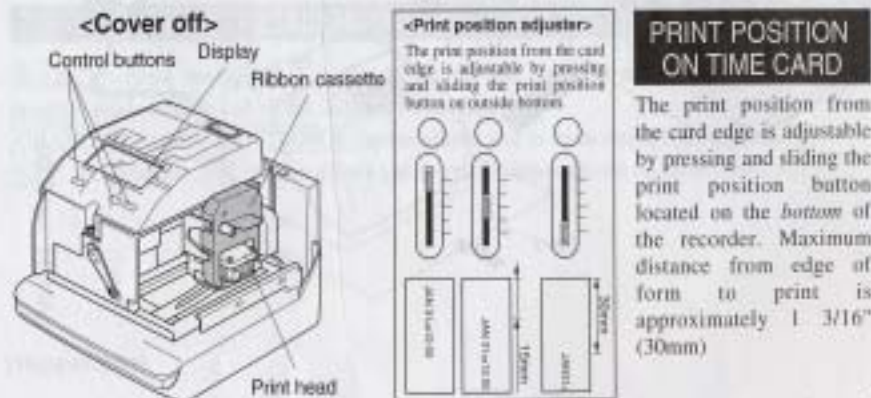



# QUICK EASY SETUP

 
## Step 1

Unlock the key and remove the top case.




## Step 3

Plug the AC cord into the AC outlet. The recorder is now ready to be set.

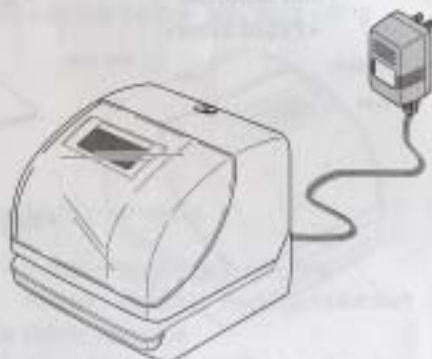


## Step 2

 Remove the PROTECTION PAD. Plug the AC adapter into the time recorder.

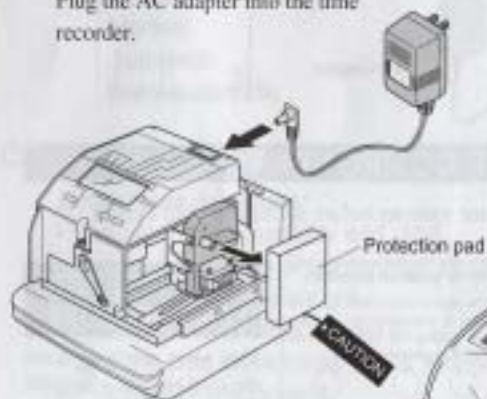

## Step 4

 Replace the cover and lock. Insert a card.

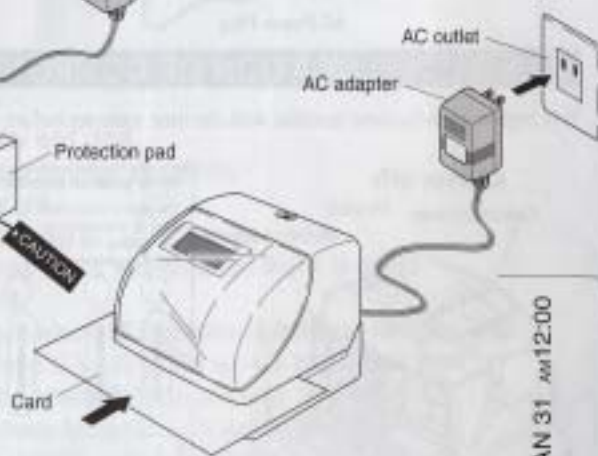

JAN 31 AM 12:00

(print example)

# HOW TO PROGRAM THE RECORDER

To enter the program setting mode, one must plug the AC adapter into the AC outlet and remove the cover. Next press the **SELECT** button once. Then the recorder changes into the program mode showing the ▲ on the display positioned under the "TIME" mark.

**PRINT ORDER**

1.M.D.H.Min	Y=Year
2.M.H.Min	M=Month
3.M.D.Y.H.Min	D=Date
4.D.M.Y.H.Min	DDW=Day of the week
5.Y.M.D.H.Min	H=Hour
6.Y.M.D.H.Min.S	Min=Minute
7.D.H.Min	Sec=Second
8.DW.D.H.Min	C=Comment
9.M.D	
10.M.D	
11.DW.D.M.Y	
12.C.M.D.Y	
13.C.D.M.Y	
14.C.YLD	
15.M.D.YC	
16.D.W.YC	
17.Y.D.C	
18.C.D.H.Min	

**PRINT STYLE**

1.2Digits	BB Hour	1.ZERO	1.ACVD
7.4Digits	1.7Hour	0.0000	2.5EET
	2.24Hour	2.ZERO	3.N
	CC Minute	Enabled	4.0UT
	1.100		5.CFMD
	2.1/100		6.PILD
	3.1/100		7.PMD
	4.1/10		8.USD
			9.AMED
			10.NOD
			11.DRSH
			12.APRB
			13.CMPL

**DISPLAY**

AA:Sec	AA:Year	1.12Hour
BB:Hour	BB:Month	2.24Hour
CC:Min	CC:Date	

**LCD**

RRBB-CC

▲

8888:88

AMPM

**CONTROL BUTTONS:** SELECT, CHANGE, SET

**FUNCTIONS:** DAYLIGHT SAVING TIME, PRINT METHOD

**PROGRAM MODES:** 1.5R/0.0, 2.FINCH, 3.SPANH, 4.PRT/GRIB, LANGUAGE, 5. Print Direction (1.Right, 2.Left, 3.Manual), 6. Print Activation (1. Automatic, 2. Semi-automatic, 3. Manual)

## FUNCTION OF 3 CONTROL BUTTONS

**SELECT**: Press the **SELECT** button to choose the program setting mode. The selected program mode is indicated by the ▲ mark on the display.

**CHANGE**: Pressing the **CHANGE** button allows you to cycle through the options.

**SET**: Pressing the **SET** button allows you to set the option shown on the display.

# SETTING THE DISPLAY FORMAT

## SETTING THE TIME

Ex: Set the time from 10:08 to 10:09.

### Step 1



Press the **[SELECT]** button and position the ▲ under the "TIME" mark. One can see that the "hour" flashes. (the flashing means that the number can be changed.)



#### Change the "Hour"

In case of the example, press the **[SET]** button because the hour is not to be changed.

At that moment, the flashing changes from "Hour" to "Minute".

### Step 2



#### Change the "Minute"

In this case, press the **[CHANGE]** button to set at "09". And then press the **[SET]** button.

At that moment, the "Second" starts to run from "00".

### Step 3



After you finish setting the time, press the **[SET]** button once again. Now the hour/minute setting has been completed. Replace the cover and lock.

Important: Printing will not occur unless Step 3 is completed.

# SETTING THE PRINT ORDER

## SETTING THE DATE

Ex: Change the date from October 20, 2001 to October 21, 2001.

### Step 1



Press the **[SELECT]** button, and position the ▲ under the "DATE". One can see that, the "Year" flashes.



#### Change the "Year"

In case of the example, press the **[SET]** button because the year 2001 is not to be changed.

At that moment, the flashing changes from "Year" to "Month".

### Step 2



#### Change the "Month"

In case of the example, press the **[SET]** button because the month is not to be changed.

At that moment, the flashing changes from "Month" to "Date".

### Step 3



#### Change the "Date"

Press the **[CHANGE]** button to set at "21". And then press the **[SET]** button.

### Step 4



After you finish setting the date, press the **[SET]** button once again. Now the date setting has been completed. Replace the cover and lock.

Important: Printing will not occur unless Step 4 is completed.



## SETTING THE 12/24 HOUR DISPLAY FORMAT

Ex: Set the hour format to 24 hour.

### Step 1



Press the **SELECT** button and position the ▲ under the "HOUR" mark. At that moment, the flashing digit indicates "Hour Display Format Options".

In case of the example, press the **CHANGE** button to set at "2". And then press the **SET** button.

	Hour Display Format Options	Display
1.	12 hour	PM 3:00
2.	24 hour	15:00

### Step 2



After you finish setting the 12/24 hour display format, press the **SET** button once again.

Now the 12/24 hour setting has been completed. Replace the cover and lock.

Important: Printing will not occur unless Step 2 is completed.

## SETTING THE PRINT ORDER

Ex: Set the print order to "Month, Date, Year, Hour, Minute".

### Step 1



Press the **SELECT** button and position the ▲ under the "PRINT ORDER" mark. At that moment, the flashing digit indicates "Print Order Options".

In case of the example, press the **CHANGE** button to set at "3". And then press the **SET** button.

Y=Year, M=Month, D=Date, DOW=Day of the week, H=Hour, Min=Minute  
S=Second, C=Comment

	Print Order Options	Print Example
1.	M, D, H, Min	JAN 31 AM10:00
2.	D, M, H, Min	31 JAN AM10:00
3.	M, D, Y, H, Min	JAN 31 '01 AM10:00
4.	D, M, Y, H, Min	31 JAN '01 AM10:00
5.	Y, M, D, H, Min	'01 JAN 31 AM10:00
6.	Y, M, D, H, Min, S	'01 JAN 31 AM 10:00:00
7.	D, H, Min	31 AM10:00
8.	DOW, D, H, Min	WE, 31 AM10:00
9.	Y, M, D	'01 JAN 31
10.	M, D	JAN 31
11.	DOW, D, M, Y	WE, 31 JAN '01
12.	C, M, D, Y	SENT JAN 31 '01
13.	C, D, M, Y	SENT 31 JAN '01
14.	C, Y, M, D	SENT '01 JAN 31
15.	M, D, Y, C	JAN 31 '01 SENT
16.	D, M, Y, C	31 JAN '01 SENT
17.	Y, M, D, C	'01 JAN 31 SENT
18.	C, D, H, Min	SENT 31 AM10:00

### Step 2



After you finish setting the print order, press the **SET** button once again. Now the print order setting has been completed. Replace the cover and lock.

Important: Printing will not occur unless Step 2 is completed.

# SETTING THE PRINT STYLE

## SETTING THE YEAR DIGIT

Ex: Set the year imprint to 4 digits.

### Step 1



Press the **SELECT** button and position the ▲ under the "YEAR DIGIT" mark. At that moment, the flashing digit indicates "Year Digit Options".

In case of the example, press the **CHANGE** button to set at "2", and then press the **SET** button.

	Year Digit Options	Print Example
1.	2 Digits	JAN 31 '01 AM10:00
2.	4 Digits	JAN 31 2001 AM10:00

### Step 2



After you finish setting the year digit, press the **SET** button once again. Now the year digit setting has been completed. Replace the cover and lock.

Important: Printing will not occur unless Step 2 is completed.

## SETTING THE HOUR/MIN.

Ex: Set the print style of the "Hour" and "Minute" to 24 hour and 1/100min.

### Step 1



Press the **SELECT** button and position the ▲ under "HOUR/MIN" mark. At that moment, the flashing digit indicates "Hour Options".

In case of the example, press the **CHANGE** button to set at 2. And then press the **SET** button. At that moment, the flashing changes from "Hour" to "Minute".

#### Change the "Hour".

	Hour Options	Print Example
1.	12 Hour	JAN 31 PM3:00
2.	24 Hour	JAN 31 15:00

### Step 2

 


In case of the example, press the **CHANGE** button to set at "2". And then press the **SET** button.

#### Change the "Minute".

	Order Options	Print Example		Order Options	Print Example
1.	1/60 Min.	JAN 31 AM12:10	3.	1/20 Min. (=5/100 Min.)	JAN 31 AM12.15
2.	1/100 Min.	JAN 31 AM12.17	4.	1/10 Min.	JAN 31 AM12.1

### Step 3

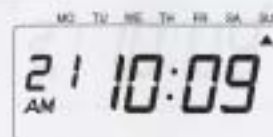

After you finish setting the hour/minute, press the **SET** button once again. Now the hour/minute setting has been completed. Replace the cover and lock.

Important: Printing will not occur unless Step 3 is completed.

# SETTING THE PRINT STYLE

## DISABLING THE LEADING ZERO

Ex. Set the leading zero to "Zero: Disabled".

### Step 1



Press the **SELECT** button and position the ▲ under "LEADING ZERO" mark. At that moment, the flashing digit indicates "Leading Zero Options".

In case of the example, press the **CHANGE** button to set at "1". And then press the **SET** button.

	Leading Zero Options	Print Example
1.	ZERO Disabled	JAN 1 PM3:00
2.	ZERO Enabled	JAN 01 PM03:00

### Step 2



After you finish setting the leading zero, press the **SET** button once again. Now the leading zero setting has been completed. Replace the cover and lock.

Important: Printing will not occur unless Step 2 is completed.

# SETTING THE PRINT METHOD

## SETTING THE COMMENT

Ex: Set the comment to "SENT".

### Step 1



Press the **SELECT** button and position the ▲ under "COMMENT" mark. At that moment, the flashing digit indicates "Comment Options". (The flashing means it can be changed)

In case of the example, press the **CHANGE** button to set at "2". And then press the **SET** button.

	Comment Options	Print Example
1.	RCVD (Received)	JAN 31 '01 RCVD
2.	SENT	JAN 31 '01 SENT
3.	IN	JAN 31 '01 IN
4.	OUT	JAN 31 '01 OUT
5.	CFMD (Confirmed)	JAN 31 '01 CFMD
6.	FILED	JAN 31 '01 FILED
7.	PAID	JAN 31 '01 PAID
8.	USED	JAN 31 '01 USED
9.	FAXED	JAN 31 '01 FAXED
10.	VOID	JAN 31 '01 VOID
11.	ORIGN (Original)	JAN 31 '01 ORIGN
12.	APRD (Approved)	JAN 31 '01 APRD
13.	CMPLD (Completed)	JAN 31 '01 CMPLD

### Step 2



After you finish setting the comment, press the **SET** button once again. Now the comment setting has been completed. Replace the cover and lock.

Important: Printing will not occur unless Step 2 is completed.

 


## SETTING THE LANGUAGE

This setting is available if one selects "Month," "Day of the week" or "Comment" in previous "PRINT ORDER".

Ex: Set the print language into French.

### Step 1

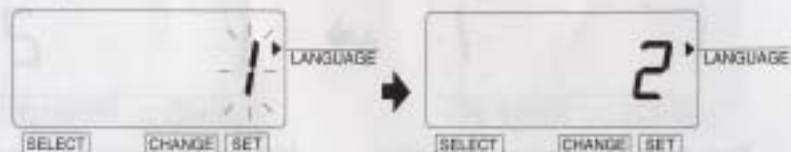


Press the **SELECT** button and position the ▲ next to "LANGUAGE" mark. At that moment, the flashing digit indicates "Print Language Options".

In case of the example, press the **CHANGE** button to set at "2". And then press **SET** button.

	Print Language Options	Print Example
1.	ENGLISH	WE, 26 DEC '01 OUT 31 AM10:00
2.	FRENCH	ME, 26 DEC '01 SORT 31 AM10:00
3.	SPANISH	MI, 26 DIC '01 SAL 31 AM10:00
4.	PORTUGUESE	QA, 26 DEZ '01 SAIDA 31 AM10:00

### Step 2

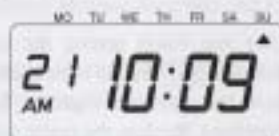 


After you finish setting the language, press the **SET** button once again. Now the language setting has been complete. Replace the cover and lock.

Important: Printing will not occur unless Step 2 is completed.

## SETTING THE PRINT METHOD

 Ex: Change the print direction to "Left" and the print activation to "Manual".

### Step 1

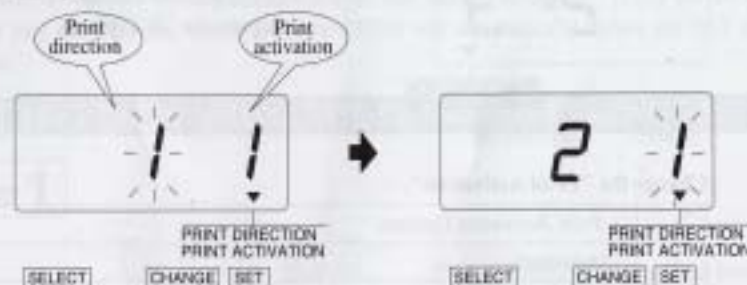

Press the **SELECT** button and position the ▼ over at the "PRINT DIRECTION; PRINT ACTIVATION".

At that moment, the flashing digit indicates "Print Direction Options".

In case of the example, press the **CHANGE** button to set at "2". And then press the **SET** button.

The flashing changes from the "PRINT DIRECTION" to the "PRINT ACTIVATION".

#### Change the "Print Direction".

	Print Direction Options
1.	Right-hand margin of form
2.	Left-hand margin of form



**Step 2**

 


In case of the example, press the **CHANGE** button to set at "3". And then press the **SET** button.

Change the "Print Activation".

	Print Activation Options
1.	Automatic
2.	Semi-automatic
3.	Manual

**Step 3**

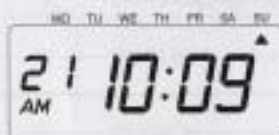

After you finish setting the print method, press the **SET** button once again. Now the print method setting has been completed. Replace the cover and lock.

Important: The recorder will not print if you do not complete Step 2.

**Automatic** will allow the clock to print by simply inserting a card or form.  
**Semi-automatic** will allow the clock to print by pressing the push bar only when a card or form is inserted. (will print only when the card or paper reaches the sensor)  
**Manual** will allow the clock to print by pressing the push bar. (will print even when the card or form does not reach the sensor)



Ex: Start date Sunday, April 7, 2002.  
 End date Sunday, October 27, 2001.


If you set the dates as given in the example above, the time recorder remembers the starting date of DST as the first Sunday in April and the last Sunday in October. If you set the DST start and stop dates for the current year, the ES700 will automatically update the DST dates each year.

SETTING THE STARTING DATE OF DAYLIGHT SAVING TIME


**Step 1**



 
Press the **SELECT** button and position the ▼ over the "D.S.T.START". At that moment the "Year" flashes. (The flashing means it can be changed)



 
**Change the "Year"**  
 In case of the example, press the **CHANGE** button to set at "02". And then press the **SET** button. At that moment, the flashing changes from "Year" to "Month".




**Step 2**

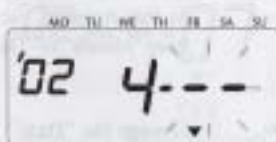 

 
**Change the "Month"**  
 Press the **CHANGE** button to set at "4". And then press the **SET** button. At that moment, the flashing changes from "Month" to "Date".




**Step 3**

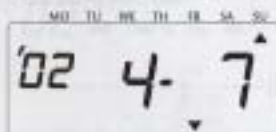 

 **Change the "Date"**  
 Press the **CHANGE** button to set at "7". And then press the **SET** button.



**Step 4**

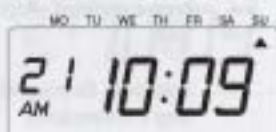 

After you finish setting the starting date of D.S.T., press the **SET** button once again. Now the starting date of D.S.T. setting has been completed. Go on to the "SETTING THE ENDING DATE OF DAYLIGHT SAVING TIME".


## SETTING THE ENDING DATE OF DAYLIGHT SAVING TIME

 Ex: Daylight saving time ends on Sunday, October 27, 2002.

### Step 1





Press the **[SELECT]** button and position the ▼ over the "D.S.T. END". At that moment, the "Year" flashes.



#### Change the "Year"

  In case of the example, press the **[CHANGE]** button to set at "02". And then press the **[SET]** button. At that moment, the flashing changes from "Year" to "Month".




### Step 2




#### Change the "Month"

 Press the **[CHANGE]** button to set at "10". And then press the **[SET]** button. At that moment, the flashing changes from "Month" to "Date".




### Step 3

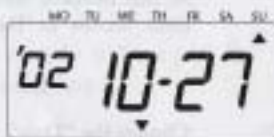 

#### Change the "Date"

 Press the **[CHANGE]** button to set at "27". And then press the **[SET]** button.



### Step 4



After you finish setting the ending date of D.S.T., press the **[SET]** button once again. Now the ending date of D.S.T. setting has been completed. Replace the cover and lock.

Important: Printing will not occur unless Step 4 is completed.

## DELETING THE DAYLIGHT SAVING TIME SETTING

 
To delete and cancel the daylight saving time, change the display of "Month" of the starting setting to "--".

Ex: Change April 7, 2002 of "D.S.T. START" and delete daylight saving time setting.



### Step 1




Press the **[SELECT]** button and position the ▲ over the D.S.T. START. At that moment, the "Year" flashes.



  
Next, press the **[SET]** button. At that moment, the flashing changes from "Year" to "Month".




### Step 2

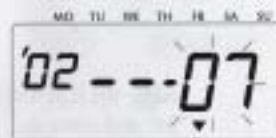 

 Press the **[CHANGE]** button to set at "--". And then press the **[SET]** button. At that moment, the flashing changes from "Month" to "Date".



### Step 3

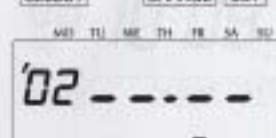 

Press the **[SET]** button again. At that moment, the flashing changes from "7" to "--".



### Step 4



Press the **[SET]** button once again. Now the D.S.T. deleting has been completed. Replace the cover and lock.

Important: Printing will not occur unless Step 4 is completed.



## SETTING THE PASSWORD

When the password is set, you will be required to enter the password. If the password you entered does not coincide with the setting, you cannot change the setting values.

You may select any 4-digit number from 0001 to 9998 as your password.

Note: "0000" and "9999" are not valid passwords.

### REGISTERING THE PASSWORD

 
Ex: Set the password to "1234"

#### Step 1



PASSWORD  
SELECT CHANGE SET


Press the **SELECT** button and position the ▲ mark at the "PASSWORD". The first two digits flash.

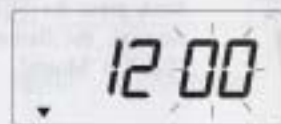

PASSWORD  
SELECT CHANGE SET

In case of the example, press the **CHANGE** button to select "12", and press the **SET** button. The flashing changes to the last two digits.


#### Step 2

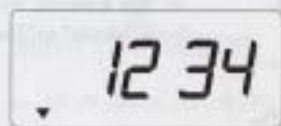 

PASSWORD  
SELECT CHANGE SET

Using the **CHANGE** button, select "34" and press the **SET** button.

#### Step 3

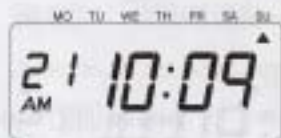 

After the password has been set, press the **SET** button once more. The password is now set. Replace the cover and lock.

Important: Printing will not occur unless Step 3 is completed.

### USING THE PASSWORD TO ACCESS PROGRAM

If you want to change any program settings, you are required to enter the current password first. "9999" will be displayed when you press the **SELECT** button before entering.

Ex: Password "1234"

#### Step 1



Press the **SELECT** button. At that moment "9999" is displayed and first two digits flash.



In the example, press the **CHANGE** button to set at "12". And then press the **SET** button.

At that moment, the flashing changes to last two digits.

#### Step 2



In case of the example, press the **CHANGE** button to set at "34". And then press the **SET** button. At that moment, the ▲ mark indicates the "TIME".



#### Step 3

Select desired setting mode by pressing the **SELECT** button. Then make settings as explained.

## CANCELING THE PASSWORD

The code "0000" will cancel the password when entered. You may select a different 4-digit password from 0000 to 9998 using this same method.

Ex: Cancel the password "1234".

### Step 1



Press the **SELECT** button, at that moment "9999" is displayed and first two digits flashes.



In case of the example, press the **CHANGE** button to set at "12". And then press the **SET** button.

At that moment, the flashing changes to last two digits.

### Step 2



In case of the example, press the **CHANGE** button to set at "34". And then press the **SET** button.

At that moment, the ▲ mark indicates the "TIME".



### Step 3



Press the **SELECT** button and position the ▲ mark at the "PASSWORD".

At that moment, first two digits "12" flashes.

Press the **CHANGE** button to set at "00". And then press the **SET** button.

At that moment, the flashing changes to last two digits "34".



 
### Step 4



Press the **CHANGE** button to set at "00".

And then press the **SET** button.

### Step 5

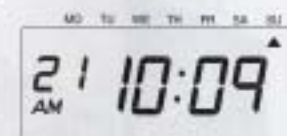

After you finish canceling the password, press the **SET** button once again.

Now the password canceling has been completed. Replace the cover and lock.

Important: Printing will not occur unless Step 5 is completed.




## RESETTING

 To return all settings to the factory defaults, push the reset switch with a pointed implement.

**NOTICE:** All custom settings made by individuals will be deleted and will revert to the factory defaults when the reset switch is pushed. To make new settings, please refer to "Setting ...".

Reset switch

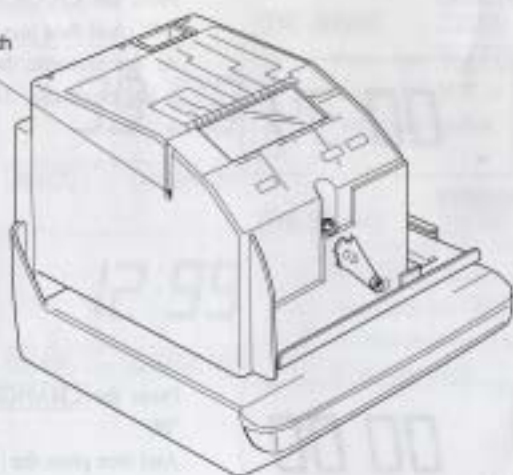

## WALL MOUNTING

**Caution:** The supplied screws are intended for use on a thick wooden wall or wooden column. Do not use any other materials. The time clock may come off if used on other materials.

### Step 1



 
Install the supplied wall-mount screws into a wall by using the template. Be sure to keep about 6mm (1/4") of the screw head away from the wall. The recommended height from the floor to the bottom of the ES700 is 45".

### Step 3



Replace cover and lock.

### Step 2

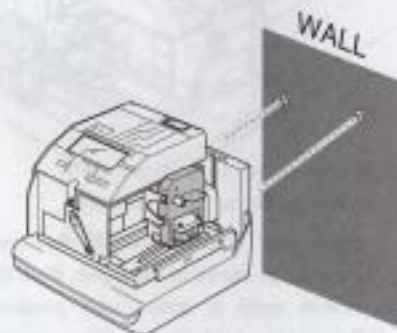

Unlock the key and remove the cover. And then hang it on the wall.

# REPLACING THE RIBBON CASSETTE

## Step 1



 
Unlock the key and remove the cover.

## Step 3



Turn the knob of the new cassette in the direction of the arrow (clockwise) to tighten the ribbon.

## Step 2

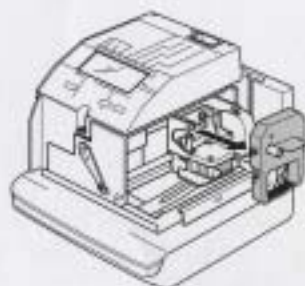


Hold the ribbon cassette by its tab and pull straight out to remove it.

## Step 4




 Place the cassette inside the time recorder as shown in the figure. Push the ribbon until it snaps into position. Turning the knob on the ribbon cassette may make installation easier.

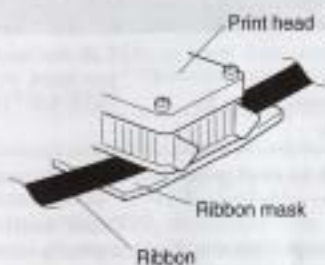

**NOTICE:** Install the cassette so that the ribbon is between the print head and the ribbon mask. Printing will not come out properly if the ribbon is placed behind the ribbon mask.

## Step 5

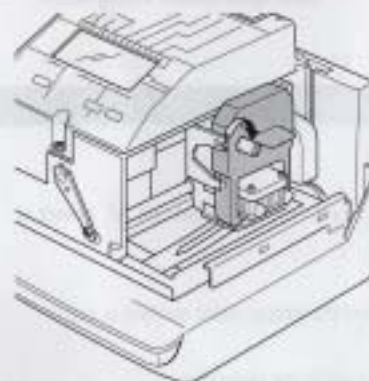 

Turn the knob of the cassette in the direction of the arrow to tighten the ribbon.

## Step 6



Replace the cover and lock.



## TROUBLESHOOTING

Error No.	Error contents	Action
E-00	CPU error	Call the servicing dealer from whom you purchased your ES700 or call Acroprint at (800)-344-7190 (in USA).
E-01	The remaining life of lithium battery for memory back-up is short.	
E-05	The card is not inserted in the clock properly.	Correctly insert the card.
E-30	Cannot print. The printer motor or home position sensor is not normal.	Make sure that the ribbon cassette is correctly inserted in place.
E-38	Cannot print. The print head motor or the sensor does not operate properly.	Press the push bar.
E-40	Incorrect password	Enter the correct password again.
E-41	D.S.T. setting mistake	Make sure the correct starting and ending date of daylight saving time and enter again.
E-49	Setting data you entered is not usable.	Refer to your owner's manual on the page related to the item (you want to set and enter again correct setting data.)

### Other Failures

- **The time clock does not operate**

Ensure the AC adapter is properly plugged into the AC outlet and AC power is available.

- **The time clock does not print**

Ensure the ribbon is installed correctly and the proper print method is set.

- **The card is jammed**

Press the push bar and try to pull out the card at the same time.

## SPECIFICATIONS

Clock accuracy	Monthly accuracy $\pm 15$ sec. (at ordinary temperatures)
Calendar	Year up to 2099. Automatically adjusted to leap years, 31-day and months with thirty or fewer days, and the days of the week
Printing system	Dot matrix imprint
Power failure compensation	Five years of cumulative power failure hours after the date of operation Temperature: +25° to 113°F, -5° to 45°C Humidity: 20% to 80%, no condensation
Operating environment:	The unit operates normally at temperatures of 25°F (5°C) or below. The print density, reaction of the liquid crystal display, and the prints at power failure are inferior to those at normal temperature operation.
Dimension	6.45"(w) x 5.63"(h) x 6.77"(d), 164(w) x 143(h) x 172(d) mm
Weight	Approx. 4.4 lbs. with AC adapter (2.0 kg with AC adapter)
Power consumption	Approx. 15W, AC120V $\pm$ 10%, 60Hz
Rating of AC adapter	I/P AC 120V/60Hz O/P AC 15.0V 1300mA

NOTICE: Use only the supplied AC adapter.



2640 Corporate Drive  
Raleigh, North Carolina 27616 USA  
(919) 873-3800  
In USA (800) 344-7190  
Fax: (919) 873-3800  
www.acroprint.com