

TIME ZONE SETTING INSTRUCTIONS

THERE ARE EIGHT REGISTERS. THEY ARE TIME, MO./DAY, YEAR, 12/24HR. FORMAT, DAYLIGHT SAVING TIME, TIME ZONE LOCATION, BRIGHTNESS AND TIME CORRECTION THE (PLAY) BUTTON WILL DISPLAY THESE REGISTERS. TO SET A REGISTER, YOU WILL USE THE (F.F.) AND (REW) BUTTON.

NOTE: SETTING NOT REQUIRED, ALL REGISTERS HAVE BEEN PRESET, INCLUDING THE MASTER ZONE THAT IS RUNNING AT THE CORRECT TIME.

STEP 1: YOU MUST FIRST ADDRESS A ZONE TO SET IT. THE TWO DIGIT ADDRESS IS (00) THE LEFT MOST ZONE (MASTER) THEN (01), (02), (03) ETC. WHEN THE ZONE IS ADDRESSED IT FLASHES AND SETTING CAN BE DONE AT THIS TIME.

STEP 2: PRESS (PLAY) BUTTON. TO SET THE MONTH AND DAY, THE (REW) BUTTON ADVANCES THE MONTH. THE (F.F.) BUTTON ADVANCES THE DAY.

STEP 3: PRESS (PLAY) BUTTON. TO SET THE YEAR, THE (REW) BUTTON DECREASES THE YEAR. THE (F.F.) BUTTON INCREASES THE YEAR.

STEP 4: PRESS (PLAY) BUTTON. TO SET 12 OR 24 HOUR FORMAT, THE (F.F.) BUTTON SETS 12 OR 24 HOUR.

STEP 5: PRESS (PLAY) BUTTON. TO SET DAYLIGHT SAVING TIME, THE (F.F.) BUTTON ADVANCES. 0 = NO DAYLIGHT SAVING TIME.
1 = AUTOMATIC DAYLIGHT SAVING TIME. (USA)
* = OTHER COUNTRIES SEE CHART


STEP 6: PRESS (PLAY) BUTTON. TO SET ZONE, THE (F.F.) BUTTON ADVANCES ZONE. SEE CHART FOR YOUR ZONES. **NOTE:** A 7 IS DISPLAYED ON THE FAR LEFT TO IDENTIFY THE ZONE REGISTER.

STEP 7: PRESS (PLAY) BUTTON. TO SET BRIGHTNESS, THE (F.F.) BUTTON DECREASES BRIGHTNESS. THE (REW) BUTTON INCREASES BRIGHTNESS. (OPTION) **NOTE:** A b IS DISPLAYED ON THE FAR LEFT TO IDENTIFY THIS REGISTER.

STEP 8: PRESS (PLAY) BUTTON. TO SET TIME CORRECTION, THE (F.F.) BUTTON DECREASES THE CORRECTION. THE (REW) BUTTON INCREASES THE CORRECTION. **NOTE:** A c IS DISPLAYED ON THE FAR LEFT TO IDENTIFY THE REGISTER. THE NUMBER DISPLAYED IS IN SECONDS PER MONTH CORRECTION A MINUS SIGN OVER THE c SUBTRACTS SECONDS PER MONTH.

STEP 8: PRESS (PLAY) BUTTON. TO SET TIME, THE (REW) BUTTON ADVANCES THE HOUR. THE (F.F.) BUTTON ADVANCES THE MINUTES.

NOTE: WHEN ADVANCING THE MINUTES, THE SECONDS ARE ZEROED.

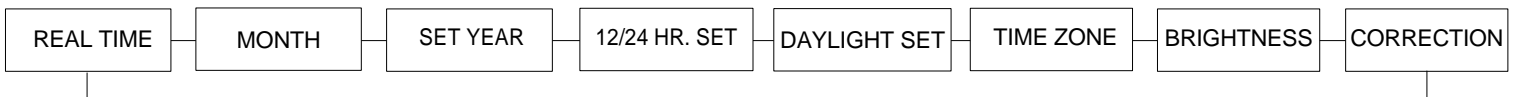

PRESS (TIME ZONE) BUTTON FIRST.



IF YOUR REMOTE IS NOT FUNCTIONING THE CODE MAY BE LOST.

TO REPROGRAM PRESS THE TIME ZONE KEY UNTIL THE FOUR MODE KEYS FLASH TWICE. ENTER 0 0 1 THE TIME ZONE KEY SHOULD FLASH THREE TIMES AND TURN OFF. THE REMOTE IS NOW PROGRAMED.

1.8", 2.5", 4" AND 5" DIGIT SIZE
12 OR 24 HOUR FORMAT
2 TO 24 ZONES
NON GLARE LENS
SUPER BRIGHT LEDS WITH BRIGHTNESS CONTROL
AUTOMATIC TIME TRIMMING FOR SUPERIOR ACCURACY
CUSTOM LETTERING TO YOUR SPECIFICATION
BLACK ANODIZED ALUMINUM FRAME
10 YEAR LITHIUM BATTERY BACKUP (Standard)
AUTOMATIC DAY LIGHT CORRECTION (Standard)
INFRARED REMOTE CONTROL (Standard)